

---

## Ventilation Smoke Tube (low corrosive)

**KWIK<sup>®</sup>DRAW**  
UNIPHOS

Part No. D5019708 / -709

---

- Remove plastic tube and aspirator bulb from the box.  
Crush both glass ampoules inside the plastic tube as shown in fig. 1.

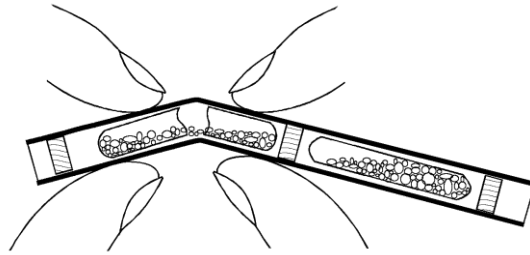


fig. 1

- Connect tube and aspirator bulb. See fig. 2.  
Note: The ampoule containing white granulate has to be next to the bulb.



fig. 2

Squeezing the rubber aspirator bulb will push air through the plastic tube and create smoke.

- At temperatures  $< 4^{\circ}\text{C}$  ( $< 40^{\circ}\text{F}$ ) it is recommended to warm the tube (e.g. in hand) for a better smoke generating.
- Using Toximeter II (Part. No. D5142705) for smoke generating connect tube by adapter (part No. D5142707) and rubber tube.

### Disposal:

Store used ventilation smoke tubes for a few hours under water and treat as normal waste.